

INSTRUCTIONS FOR RV WATER FILTER STORE SINGLE-, DUAL- and TRIPLE-CANISTER INSTALLATION

I - CONTENTS

- 1) Head assembly (one, two or three heads with fittings)
- 2) Optional bracket and screws
- 3) Sumps (one two or three)
- 4) Plastic baggie with O-Rings
- 5) Canister Wrench
- 6) Filter Cartridges

III - ASSEMBLY INSTRUCTIONS

- 1) If you have a bracket, locate the screws in the baggie with the o-ring. Notice the input and output of the canister head(s) and attach the bracket so that the direction of flow of water is what you desire. Start two screws on opposite corners and hand tighten. Carefully tighten each of them, **DO NOT OVERTIGHTEN**. Hand start the rest of the screws and tighten each of them.




- 2) O-RING INSTALLATION – Locate the baggie with o-rings. They should be taped to one of the canisters. Each o-ring fits down inside the Sump on a groove just below the threads. They **DO NOT** go over the threads of the head. Put the o-ring into the sump until it fits into the groove and put sump aside, being careful not to dislodge the o-ring. The rings do not require additional lubrication, they should still have some from the factory. If you feel you want to add more, use food grade o-ring lubrication.

3) CARTRIDGE INSTALLATION

a. Filter Cartridge Order

- i. **SEDIMENT FILTER** - any system with one or more sediment cartridges, the sediment will go first, that is, closest to the input fitting. This will protect the downstream filters from getting prematurely plugged with sediment. In triple systems where you have two sediment filters, put the 5 micron filter first, followed by the 1 micron, followed by the carbon filter.
- ii. **CARBON FILTER** – This filter comes immediately after the last sediment filter. If your system has two carbon cartridges, it doesn't matter what order they go in.
- iii. **SPECIALTY FILTERS** – These filters should go last in the system, following the last carbon filter.

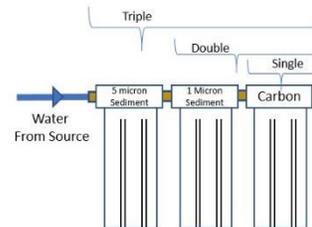

- b. Carefully unwrap the cartridge and discard the wrapping
- c. Rinse the cartridge with water to get dust and carbon fines off the surface of the filter
- d. Carefully place the cartridge into the center of the canister with the gasket at the top.

4) SUMP INSTALLATION

- a. Carefully screw the sump onto the head without dislodging the o-ring or the cartridge. Tighten to hand tight, and then snug it up with the wrench. **DO NOT OVERTIGHTEN**
- b. Repeat for all canisters.
- c. Attach the garden hose to the female fitting on the canister assembly, and a separate hose on the output fitting that goes to the RV.

5) BRACKET INSTALLATION OR SPECIAL PLUMBING

- a. If your system has a mounting bracket, find a solid support beam to attach the system. If tapping into existing plumbing, contact Dave at 602-625-1875 for consultation.

 **RV WATER FILTER STORE**
Your source for clean water on the go

David Brannam
Owner/Water Filtration Specialist
602-625-1875
Dave@RVWaterFilterStore.com

Tracey Brannam
Owner/Accounts/Billing
530-919-9652
Tracey@RVWaterFilterStore.com

www.RVWaterFilterStore.com

