


## Cold Water Connection Installation

1. Turn off Water Supply and/or RV pump'
2. Find a good location to cut the PEX pipe to tap into the water supply
3. Install the two PEX x 1/2" Elbows into the ends of the PEX pipe
4. Install the 1/2" MPT x 3/8" John Guest tubing into the other end of the elbow
5. Use some 3/8" Tubing to connect the shutoff valve to the source side of the PEX
6. Mount the canister or Q-series head as desired for space and convenience. Note input and output on filter head.
7. Use 3/8" tubing to connect the shutoff valve to the filter and back to the supply side of the PEX pipe
8. Push the tube in firmly until it stops.
9. To remove the tube from the fitting, pull back on the collar and hold while pulling on the tubing.

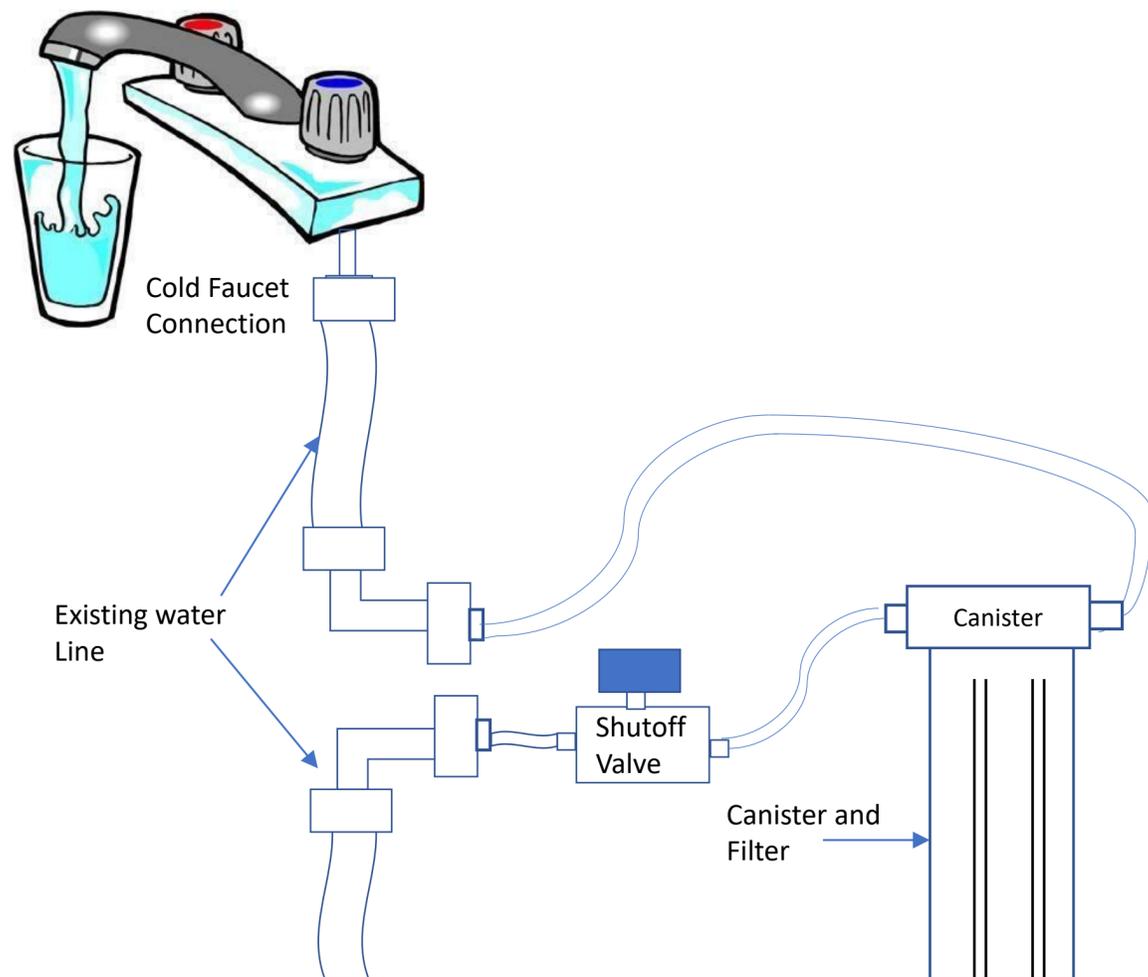

## Under Sink or Omnipure Q-Series Installation

1. Turn off Water Supply and/or RV pump'
2. Drill 7/16" or 1/2" hole in stainless sink, Corian, fiberglass, plastic sink or countertop in desired spot.
3. Install faucet and the Faucet adapter on the end of the faucet. You do not need to Teflon tape the fitting. Tighten by hand and snug up with a small wrench
4. Unscrew the existing water supply hose from the main cold water faucet and screw the swivel on the Supply Tee on to the 1/2" connection.
5. Attach the water supply hose to the bottom of the supply Tee. Now your water supply is ready.
6. Mount the canister or Q-series head as desired for space and convenience. Note input and output on filter head.
7. Use 1/4" tubing to connect the Supply to the shutoff valve to the filter and to the dispenser faucet.
8. Push the tube in firmly until it stops.
9. To remove the tube from the fitting, pull back on the collar and hold while pulling on the tubing.

