
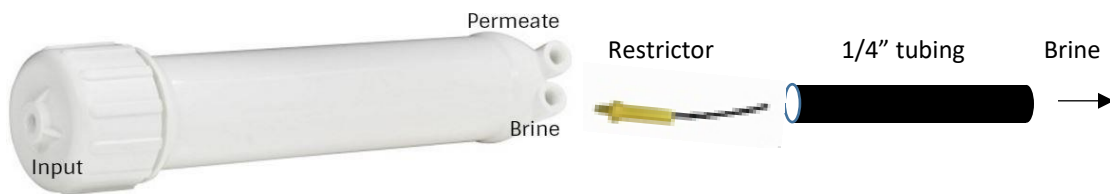


RO Flow Restrictor Installation Directions

- We ship each reverse osmosis system with a flow restrictor. This item is critical to the operation of the RO system and you need to match the flow restrictor with the size of the RO Membrane (75 GPD, 100 GPD, etc)
- When you receive your system, the restrictor will be in a plastic bag taped to the membrane housing. It looks like this. The tails are different lengths for different flow rates. 
- When connecting the 1/4" black tubing into the RO housing connector, insert the restrictor, tail first into the tube before inserting the tube into the housing. See below



- If you change the size/capacity of your membrane, remember to get a restrictor that matches the new membrane's capacity.



RV WATER FILTER STORE

Your source for clean water on the go

David Brannam
Owner/Water Filtration Specialist

602-625-1875

Dave@RVWaterFilterStore.com

Tracey Brannam
Owner/Accounts/Billing

530-919-9652

Tracey@RVWaterFilterStore.com

www.RVWaterFilterStore.com

